

Roborock H60

Cordless Stick Vacuum Cleaner User Manual

Read this user manual with diagrams carefully before using this product and store it properly for future reference.



English	003
Français	012
Deutsch	021
Italiano	030
Español	039
Nederlands	048
Polski	057
Norsk	067
Svenska	076
Português	085
Suomi	094
Română	103
Dansk	113

English

Contents

004	Safety Information
004	International Symbols Explanation
005	Product Introduction
005	Installation
005	Instructions for Use
008	Routine Maintenance
009	Basic Parameters
010	Common Issues
010	Troubleshooting
011	Error
011	EU Declaration of Conformity
011	WEEE Information
011	Warranty Information

Safety Information

Usage Restrictions

- Do not use this product outdoors or in any commercial or industrial environments. It is intended for home use only.
- Do not store the product anywhere in a car to avoid high or low temperatures affecting its battery life.
- The battery pack of this cleaner cannot be used for charging or discharging in environments with high humidity, or temperatures above 40°C (104°F) or below 4°C (39°F).
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety (CB).
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision (EU).
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

- Keep limbs and pets away from the rotating brush heads to avoid injury.
- Do not touch the power cord, nor operate the product with wet hands to prevent injuries.
- Do not vacuum any burning or smoking substances (such as non-extinguished cigarette butts).
- Do not vacuum any hard or pointy objects (such as building materials, glass, and nails).
- This product is only to be used in areas below 3,000 meters above sea level.
- Do not vacuum cords or other cables to avoid danger.
- Only use the product in accordance with the User Manual. Any loss or damage caused by improper use will be borne by the user.
- Roborock and its retailers disclaim all liability for indirect, punitive, incidental, or consequential damages resulting from the use, misuse, or inability to use this product. This disclaimer does not affect any statutory rights that may not be disclaimed under applicable law.

Battery and Charging

WARNING

- Do not charge non-rechargeable batteries.
- For the purposes of recharging the battery, this product can only be charged using the ZD024A260080EU or ZD024A260080AU power supply provided with the product.
- Do not use any third-party batteries, power cables or docks.

- To reduce the risk of injury from moving parts, keep the power off before servicing.
- Do not disassemble, repair or modify the battery, power adapter or the dock.
- Do not charge the vacuum or install the dock near heat sources or in humid areas (such as radiators or bathrooms).
- Do not wipe the adapter with a wet cloth, nor touch them with wet hands.
- If the power cord is damaged or broken, immediately stop use and contact the after-sales service.
- If the product is not going to be used for an extended period of time, fully charge it, unplug its power supply, and place it in a cool and dry place.
- Make sure that you recharge it once every three months to avoid battery overdischarge.
- Do not discard waste batteries. Leave them with a professional recycling organization.

Transportation

- It is recommended to transport the product in its original packaging.

Note

- Clean the filter cartridge with the frequency as suggested in the Routine Maintenance section.

International Symbols Explanation

 —For indoor use only.

A Product Introduction

A1 Vacuum Cleaner

 —Switch Mode

 —Power

A1-1—Display

A1-2—Main Unit

A1-3—Dust Bin

A1-4—Dust Bin Release Button

A1-5—Multi-Surface Brush

A1-6—Battery Status Indicator

A1-7—Anti-Static Point

A1-8—Battery Pack Release Button

A1-9—Charging Port

A1-10—Bendable Wand Release Button

A1-11—Bendable Wand

A1-12—Bend Button

A1-13—Multi-Surface Brush Release Button

A2 2-in-1 Cleaning Head

A3 Wall Dock

A4 Power Supply

A5 Multi-Surface Brush

A6 Bendable Wand

B Installation

B1 Cleaner Heads

B2 Wall Dock

*It is recommended that you let specialists install the wall dock. Use protective clothing, safety goggles, and other protective equipment when necessary.

B2-1—To attach the positioning sticker:

Attach the positioning sticker onto the wall. Ensure that the edges are parallel to the ground and the bottom is approximately 110 cm (3.6 ft) above the ground.

B2-2—Diameter of drill bit: 8 mm (0.31 in)

B2-3—About 110 cm (3.6 ft)

B2-4—To install the wall dock:

Prepare an electric tool with an 8-mm (0.31 in) drill bit and align it with the positioning holes on the sticker to make holes. Securely fix the wall dock using the provided expansion tubes and screws.

B2-5—Insert the charging cord into the rear hole at the bottom of the wall dock and slide it horizontally to the front hole to secure it.

Notes:

- The dock should be fixed in a cool and dry area near an outlet.
- The dock is an optional accessory.
- Prior to installation, ensure that there are no wires or pipes running through the wall where the dock will be located.

C Instructions for Use

C1 Display

Note: The MED mode is used by default every time the vacuum cleaner is turned on.

C1-1—Power button

C1-2—LED indicators

Error alerts:

- 3 LEDs in solid red: Cleaner head error
- 3 LEDs flashing red: Airway obstructed
- LED 1 and LED 3 flashing red: Battery pack error
- LED 2 in solid red: Charging error

C1-3—Switch Mode button

C1-4—Suction mode display

C1-4-1—ECO mode

C1-4-2—MED mode

C1-4-3—MAX mode

C2 Charging

C2-1—The main unit can be charged with the power supply, either directly or in the dock.

C2-2—While charging, the three LED indicators on the battery pack will light up one by one. When fully charged, all LEDs will turn off.

Notes:

- Fully charge your machine before your first use.
- The battery temperature will be high after continuous use in MAX mode. A full charge at this time may take longer. It is recommended to cool down the main unit for 30 minutes before charging.
- Your machine cannot be started while charging.

Battery Status Indicator

Status	Item	Battery Status Indicator
Discharging	Battery Level	Battery level 100~67%: LED1, LED2, and LED3 in solid white Battery level 66~34%: LED1 and LED2 in solid white, LED3 off Battery level 33~10%: LED1 in solid white, LED2 and LED3 off Battery level 9~0%: LED1 flashing white at 1Hz, LED2 and LED3 off
	Battery Pack Error	LED2 flashing red at 1Hz and turning off after 15 seconds
Charging	Battery Level	Battery level 0~33%: LED1 flashing white at 0.5Hz, LED2 and LED3 off Battery level 34~66%: LED1 in solid white, LED2 flashing white at 0.5Hz, LED3 off Battery level 67~100%: LED1 and LED2 in solid white, LED3 flashing white at 0.5Hz Full battery: LED1, LED2 and LED3 in solid white and turning off after 2 minutes
	Battery Pack Error	LED2 flashing red at 1Hz and turning off after 15 seconds

C3 Start Cleaning

To start vacuuming, press . The indicator light will turn on. By default, the MED mode is used.

Note: To stop vacuuming, press .

Precautions

1. When using the multi-surface brush, the surfaces of some fabrics may become fuzzy or exhibit resistance. In this case, it is recommended to use the 2-in-1 cleaning head.
2. Before vacuuming polished surfaces (shiny wooden flooring or glazed tiles), check if there are foreign objects in the cleaner head to avoid scratching the floor.
3. Before using the vacuum cleaner, ensure the dust bin, multi-cyclone assembly, front filter, and filter cartridge are properly installed.
4. Do not block the exhaust vent when vacuuming.
5. For fine dust like flour and construction dust, the vacuum cleaner can be used only if the amount of dust is small.
6. To prevent damage to the vacuum cleaner and the floor, do not use the vacuum cleaner to suck up sharp objects, small toys, pins, paper clips, etc.
7. Pay attention to personal safety when cleaning dangerous areas such as stairs and windows.
8. To prevent damage caused by the machine falling or tipping over, do not place it on high places such as desks and chairs or lean it against other objects.
9. The movement of the multi-surface brush may result in an unevenly polished floor. To remedy this, the floor can be wiped with a damp cloth and polished with floor wax.

Auto Shutoff

1. If any of the spinning parts become stuck, the product may power off automatically. Clear the objects stuck in the parts and retry.
2. When the cleaner head motor gets too hot, it will automatically power off. Please wait until the temperature returns to normal before resuming use.

Clearing Foreign Objects

1. If any electric cleaner head gets clogged with large objects or tangled with much hair, the roller may stop working. In such cases, prompt clearing is required.
2. To prevent accidentally turning the machine on and causing injuries, detach the cleaner head from the main unit before cleaning it.

Notes:

- Be aware of sharp objects when clearing a roller.
- If tangled objects cannot be cleared, refer to the Routine Maintenance section to remove the roller for cleaning.

C4 Usage Scenarios of Cleaner Heads

C4-1—2-in-1 Cleaning Head

Suitable for cleaning dust in narrow spaces such as door/window/wall corners, stairs, as well as dust on sofas and tabletops.

C4-2—Multi-Surface Brush

Suitable for cleaning tiles, floors, and low-pile carpets (2 cm / 0.79 in or less).

C4-3—Bendable Wand

Press the bend button on the back of the bendable wand and bend it up to 90° to easily clean under low furniture and appliances. After use, straighten the bendable wand until it clicks into place for further use.

C4-3-1—Bend Button

D Routine Maintenance

Notes:

1. The frequency of replacement may vary with the actual situation. If abnormal wear occurs, replace the parts immediately.
2. If one of the parts including filter cartridge, front filter, bendable wand, and cleaner head is blocked, the main unit will turn on and off several times and then stop operating until the blockage has been cleared.
3. Disconnect your machine from the outlet before looking for blockages. Be careful not to touch the Power button.

Main Unit

Use a soft and dry cloth to wipe the main unit. Do not rinse it. Disconnect the power before cleaning.

D1 Dust Bin

*Clean at least once every 4-6 months.

- D1-1**—Press the dust bin release button and remove the dust bin from the main unit. Then, twist the multi-cyclone assembly and pull it out.
- D1-2**—Rinse the dust bin thoroughly. Then, leave it to dry completely for at least 24 hours.

Notes:

- Empty the dust bin as soon as the dirt reaches the MAX level. Using your machine when the dirt is above the MAX line may affect the performance.
- Do not rinse the main unit to avoid damaging the electrical components inside.
- Clean the dust bin as needed.

D2 Filter Cartridge Module

*Clean every 4-6 months.

- D2-1**—Remove the dust bin as shown.
- D2-2**—Remove the module from the main unit as shown.
- D2-3**—Twist the filter cartridge and pull it out. Rotate it 360° while washing it. If necessary, tap it gently to remove any loose dust and debris.
- D2-4**—Leave it to dry completely for at least 24 hours.

Notes:

- Wash the filter cartridge with running water and do not use any detergent to prevent blockages.
- Do not clean the filter cartridge with brushes or fingers.

D3 Replacing the Battery Pack

The rechargeable lithium-ion battery pack in this product is detachable and consumable. When the battery reaches the end of its life, its runtime will become short even after being properly charged.

- D3-1**—Press and hold the battery pack release button and slide the battery forward to remove it.
- D3-2**—Install a new battery pack.

D4 Multi-Surface Brush Roller

To maintain optimum performance, check your cleaning head roller regularly and clear any obstructions. To prevent injuries, make sure the cleaner head is detached from the main unit and take care not to touch ☹.

Notes:

- The cleaner head roller must be removed for separate cleaning.
 - There are electrical components in the multi-surface brush and bearings in the multi-surface brush roller. Do not wash them with water.
- D4-1**—Place the cleaner head as shown. Grab the tab on the end cap and rotate counterclockwise to the unlock position.
- D4-2**—Slide your end cap and roller out of the cleaner head.
- D4-3**—Clear any debris from the end cap and roller.
- D4-4**—Push the end cap back on to the roller.
- D4-5**—Slide the roller back into the cleaner head and turn the tab clockwise until it clicks into place.

Basic Parameters

Vacuum Cleaner

Model	H10A3A
-------	--------

Rated Voltage/ Current	21.6 VDC/15.3 A
---------------------------	-----------------

Battery	21.6 V/2,500 mAh (TYP) Lithium-ion battery
---------	---

Battery Model	PF061ULK
---------------	----------

Power Supply

Model	ZD024A260080EU ZD024A260080AU
-------	----------------------------------

Rated Input	100-240 VAC 50-60 Hz 0.8 A
-------------	-------------------------------

Rated Output	26.0 VDC 0.8 A
--------------	----------------

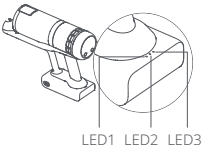
Charging Battery	21.6 V/2,500 mAh (TYP) Lithium-ion battery
---------------------	---

Common Issues

The machine may stop working when an anomaly occurs. Refer to the table below. If the issue persists, contact customer service for repair.

Issue	Solution
An electric cleaner head cannot rotate	<ul style="list-style-type: none">• The motor of the cleaner head may trigger the over-temperature protection. Wait until the temperature returns to normal before use.• The power contacts of the cleaner head may be dirty. Wipe them with a soft, dry cloth and try again.
Reduced suction power	<ul style="list-style-type: none">• The dust bin is full or the filter cartridge is clogged. Use the machine after cleaning them.• The cleaner head is clogged. Remove any blockages from it.
The battery status indicator does not display when charging	<ul style="list-style-type: none">• The battery may be fully charged and go to sleep.
Slow charging	<ul style="list-style-type: none">• The vacuum cleaner will automatically reduce its charging speed if the ambient temperature is too high or too low. This is designed to extend the battery lifespan. Wait until the temperature returns to normal before charging.

Troubleshooting

	Battery Status Indicator	Possible Cause	Solution
	LED2 flashing red quickly during use	Airway obstructed	Check if the dust bin, bendable wand, or cleaner head is clogged and clear any foreign objects.
		Cleaner head blocked	Clear any foreign objects entangled in the cleaner head.
	LED1 flashing white during use	Low battery level	Charge the machine before use.

Error

If an error occurs during use, the three indicator lights on the display will stay solid red or keep flashing red. Refer to the table below to maintain normal machine performance.

Status	Error	Solution
3 LEDs flashing red	Airway obstructed	Check if the dust bin, bendable wand, or cleaner head is clogged. Check if the filter cartridge or front filter is clogged with dust buildup.
3 LEDs in solid red	Roller blocked	Refer to the Routine Maintenance section to clear any debris and hair from the roller.

If any indicators display a red light in other statuses, contact the after-sales service team for repair.

EU Declaration of Conformity

We Shenzhen Roborock Innovation Technology Co., Ltd. hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:
<https://global.roborock.com/pages/compliance>

WEEE Information

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Warranty Information

The warranty period depends on the laws of the country in which the product is sold, and the warranty is the responsibility of the seller.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear.
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories, use of force.
- Damage caused by external influences.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.
- Partially or completely dismantled appliances.