

Roborock Q7 Series

Robotic Vacuum Cleaner User Manual

Read this user manual with diagrams carefully before using this product and store it properly for future reference.



| | |
|-------------------|------------|
| English | 002 |
| Français | 012 |
| Deutsch | 025 |
| Italiano | 038 |
| Español | 050 |
| Nederlands | 063 |
| Polski | 076 |
| Norsk | 088 |
| Svenska | 098 |
| Português | 109 |
| Suomi | 121 |

English

Contents

| | |
|-----|-----------------------------------|
| 003 | Safety Information |
| 004 | International Symbols Explanation |
| 004 | Low Power Mode |
| 005 | Product Overview |
| 006 | Installation |
| 007 | Connecting to the App |
| 007 | Instructions for Use |
| 008 | Routine Maintenance |
| 009 | Basic Parameters |
| 009 | EU Declaration of Conformity |
| 010 | Common Issues |

Safety Information

Restrictions

WARNING

- For the purposes of recharging the battery, only use with roborock AED08HRR or SPCDZ03RR (use with roborock BLJ18WD200080P-V, BLJ18WD200080P-S, or BLJ18WD200080P-B power supply) docking station.
- The product must be switched off and the plug must be removed from socket outlet before cleaning or maintaining the product.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- The docking station can only be used to charge the robotic vacuum cleaner equipped with a 14.4 V/3200 mAh (TYP) lithium-ion battery.

CAUTION

- Only use the product in accordance with the User Manual. Any loss or damage caused by improper use will be borne by the user.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Make sure dustbin, washable filter, dust bag, side brush, mop cloth, main brush and main brush cover are installed in place before cleaning.
- Do not use the product to clean hard or sharp objects (such as decoration wastes, glass, and nails) to avoid scratching the robot, the dock or the floor.
- Do not sit or stand on the robot or dock.
- To prevent corrosion or damage, do not use any disinfectant and only use cleaning solution recommended by Roborock.
- Do not put any low objects (such as shoes, mats) near raised areas like stairs. Otherwise, the robot may fall down caused by malfunctional sensors.
- To prevent water damage, make sure that the floor where the robot operates is free of water.
- Do not use this product on elevated surfaces without barriers such as the floor of a loft, an open-ended terrace, a slide, or top of furniture.
- Keep hair, loose clothing, fingers, and all body parts of people and pets away from seams, openings and moving parts of the product to avoid possible injury.
- Do not operate the product in a room where an infant or child is sleeping.
- Do not carry the robot using vertical bumper, side brush or bumper.
- Do not use the dock to pick up stones, paper scraps, or other objects that may block the air duct.
- Do not use the robot or dock to vacuum any burning or smoking items such as cigarettes, matches, hot ashes, or any flammable or explosive items such as lighters, gasoline, or toner used in printers or copiers.
- Place the dock on a hard, flat floor. Keep the dock, robot, and power cord away from fire and heat sources like a heating radiator. Avoid humid and narrow spaces or locations where the robot may be suspended in the air.

- Do not place any object on top of the robot or dock, near the suction inlet of the dock, or cover them with any item (including dust-proof cover).
- Do not use without dust bag.
- Do not operate the product if it has been damaged in any way. Contact customer service for help.
- Always operate the device in well-ventilated areas to prevent overheating.
- Roborock disclaims all liability for indirect, punitive, incidental, or consequential damages resulting from the use, misuse, or inability to use this product. This disclaimer does not affect any statutory rights that may not be disclaimed under applicable law.
- Do not rinse the robot and the dock.

Battery and Charging

WARNING



- Be sure that the supply voltage meets the requirements listed on the dock.
- To prevent potential smoke, heat, or fire, only use the battery, charger, power cord, dock, and other accessories provided with the product.
- Do not use the product with any type of power adapter, as this may cause danger and void the warranty.
- Do not discard waste batteries. Leave them with a professional recycling organization.
- If the dock is placed in an area susceptible to thunderstorms or with unstable voltage, take protection measures.
- If the product is left unused for a long period, store it in a cool, dry place after having it fully charged, unplugged, and switched off. Recharge it at least every three months to avoid battery overdischarge.
- To transport the product, be sure to unplug the dock, switch off the robot, and empty water tanks. Use of the original packaging is advised.

International Symbols Explanation



– For indoor use only.

Low Power Mode

When the robot is docked, press and hold  for 10 seconds to activate Low Power mode. To deactivate Low Power mode, press  until the LED indicator brightens.

A Product Overview

A1 Robot (Top View)



Power/Clean

- Press and hold to turn the robot on or off
- Press to start cleaning

Power Indicator Light

- Steady white: Waiting for orders/ Paused/WiFi connected/Cleaning/ Docking/Mapping/Emptying
- Breathing white: Starting up/ Charging (battery level > 20%)
- Flashing white slowly: Waiting for WiFi connection
- Flashing white quickly: Updating/ Connecting
- Steady red: Battery level < 20%
- Breathing red: Charging (battery level < 20%)
- Flashing red: Error



— Dock

- Press to start docking

Note: Press any button to pause a running robot.

A1-1—LiDAR Sensor

A1-2—Bumper

A1-3—Dock Locator

A1-4—Charging Contacts

A2 Robot (Bottom View)

A2-1—Side Brush

A2-2—Cliff Sensors

A2-3—Omnidirectional Wheel

A2-4—Main Brush Cover Latches

A2-5—Main Brush

A2-6—Main Wheels

A2-7—Mop Module

A3 Dustbin and Water Tank Combo Unit

A3-1—Water Tank

A3-2—Water Tank Stopper

A3-3—Release Buttons

A3-4—Washable Filter

A3-5—Dustbin

A3-6—Filling Port

A3-7—Filter Holder

A3-8—Filter Holder Latches

A4 Mop Module

A4-1—Mop Cloth Mount

A4-2—Mop Cloth Mount Latches

A4-3—Mop Cloth

A4-4—Hook and Loop Pads

A5 Moisture-Proof Mat

A5-1—Moisture-Proof Mat Adhesive Tape

A6 Power Cord

A7 Auto-Empty Dock

A7-1—Dock Cover

A7-2—Dustbin

A7-3—Status Indicator Light

- Steady white: Powered on while the robot is not docked
- Flashing white slowly: Emptying
- Steady red: Dust bag is not in place
- Off: Powered off or the robot is charging

A8 Auto-Empty Dock (Top Cover Open)

A8-1—Disposable Dust Bag

A8-2—Charging Contacts

A8-3—Dock Location Beacon

A8-4—Suction Inlet

A9 Auto-Empty Dock (Back View)

A9-1—Power Port



A9-2—Power Cord Storage Slot

A9-3—Cord Outlets

Note: Power cord can exit at either side.

B Installation

Important Information

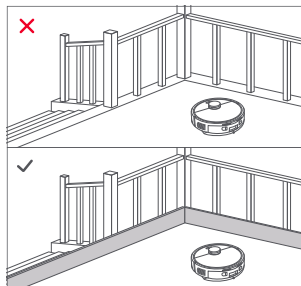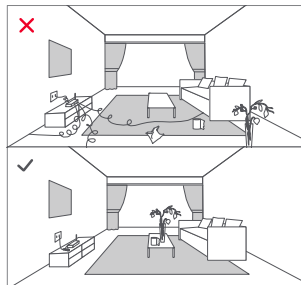

1. Tidy cords, hard or sharp objects (such as nails and glass), and loose items from the ground and move any unstable, fragile, precious, or dangerous items to prevent personal injury or property damage due to items becoming tangled in, struck by, or knocked over by the robot.

2. When using the robot in a raised area (such as in a duplex apartment), always use a physical security barrier to prevent accidental falls that may result in personal injury or property damage.

Notes:

- When using the robot for the first time, follow it throughout its whole cleaning route and watch for potential problems. The robot will be able to clean by itself in future uses.
- To prevent excessive buildup of dirt on the mop cloth, floors should be vacuumed at least three times before the first mopping cycle.

B1 Positioning the Dock

Place the dock on a hard, flat floor, flat against a wall. Connect the power cord with the dock and tidy up the excess cord. Make sure that the location has good WiFi coverage for a better experience with the mobile app. Plug in and make sure that the status indicator light is on.

B1-1— More than 1.5 m (4.9 ft)

B1-2— More than 0.5 m (1.6 ft)

Notes:

- Keep at least 0.5 m (1.6 ft) of clearance on either side, 1.5 m (4.9 ft) in front.
- If the power cord hangs vertically to the ground, it may be caught by the robot, causing the dock to be moved or disconnected.
- Keep the dock away from direct sunlight or anything that may block the dock location beacon, otherwise the robot may fail to return to the dock.

B2 Attach the Moisture-Proof Mat


After fixing the dock in place, use a dry cloth to clean the area where the moisture-proof mat will be located. Tear off the double-sided

tape at the bottom of the moisture-proof mat, and stick the mat on the floor.

Notes:

- Always place the moisture-proof mat on wooden floors.
- When necessary, remove the double-sided adhesive tape slowly to reduce residue glue.
- The moisture-proof mat attaches best to smooth surfaces.

B3 Powering On & Charging

Before using, be sure to remove the film on the dock locators on the front of and at the rear of the robot. Press and hold  to power on the robot. Wait until the power indicator light is steady white, and then place the robot to the dock. The robot is equipped with a built-in high-performance lithium-ion rechargeable battery pack. To maintain battery performance, keep the robot charged.

Notes:

- The robot may not be turned on when the battery is low. In this case, place the robot to the dock for charging.
- The robot cannot be turned off when it is being charged.

B4 Starting Mopping

Note: To prevent excessive buildup of dirt on the mop cloth, floors should be vacuumed at least three times before the first mopping cycle.

- B4-1**— Remove the dustbin and water tank combo unit, open the water tank stopper, and fill the water tank with tap water before reinstalling the stopper. Do not immerse the unit into the water directly.

B4-2— Dampen the mop cloth and wring it until it stops dripping. Install the mop onto the mop cloth mount and stick it flat in place.

B4-3— Align the positioning hole and install the mop cloth mount into the bottom of the combo unit.

B4-4— Reinstall the combo unit into the robot in place.

Notes:

- To avoid deformation, only use cold water.
- Do not rinse or immerse the dustbin and water tank combo unit with water.
- To prevent damage, do not use any disinfectant and only use cleaning solution recommended by Roborock.
- Dampen the mop cloth and wring it until it stops dripping. Install the mop onto the mop cloth mount and stick it flat in place. After mopping, empty the water tank of unused water immediately.
- All combo units are subject to water-based tests before leaving the factory. It is normal that a small amount of water remains in the unit.



Connecting to the App

1. Download the App

Search for “Roborock” in the App Store or Google Play or scan the QR code to download and install the app.



2. Reset WiFi

Turn on the robot, then press and hold  and  simultaneously for three seconds until you hear the “Entering network configuration mode” voice message. The reset is complete when the power indicator light flashes white slowly. The robot will then wait for a connection.

Notes:

- If you cannot connect to the robot due to your router configuration, a forgotten password, or any other reason, reset the WiFi and add your robot as a new device.
- If you want to disconnect WiFi, reset the WiFi and make sure the WiFi is successfully reset. Then wait for 5 minutes and WiFi will be automatically disabled. If you want to reconnect, reset the WiFi before proceeding.

3. Add device


Open the Roborock app, tap the “Add Device” or “+” button and add your device following the in-app guide.


Notes:

- The actual process may vary due to ongoing app updates. Follow the instructions provided in the app.
- Only 2.4 GHz WiFi is supported.

Instructions for Use


Turning On/Off

Press and hold  to turn on the robot. The power indicator light will come on, and the robot will wait for orders.

Press and hold  to turn off the robot and complete the cleaning cycle.

Note: The robot cannot be turned off when it is being charged.



Starting Cleaning

Press  to start cleaning. The robot will plan its cleaning route and in each room, it firstly draws out edges and then fills the room in a zigzag pattern. In so doing, the robot cleans all rooms one by one, thoroughly and efficiently.

Notes:

- Before cleaning, tidy cords (including the power cord of the dock) and valuables from the floor. Loose items may be dragged by the robot, resulting in the disconnection of electrical appliances or damage of cords and property.
- Before starting each cleaning task, make sure that the mop cloths have been properly installed.
- To make sure the robot returns to the dock automatically, start the robot from the dock and do not move the dock during cleaning.
- Cleaning cannot start if the battery level is too low. Allow the robot to charge before starting a cleanup.
- If the battery runs low during a cleaning cycle, the robot will automatically return to the dock. After charging, the robot will resume where it left off.

Pause

When the robot is running, press any button to pause it, press  to resume cleaning. Press  on a paused robot to send it back to the dock for charging.

Note: Placing a paused robot on the dock manually will end the current cleanup.

Emptying

After cleaning, the robot will return to the dock and auto-emptying will automatically begin.

Notes:

- When emptying has been left unused for a long period, empty the dustbin manually and make sure the air inlet is clear for optimal emptying performance.
- Do not use without dust bag installed in place or dock cover closed.


Sleep

If the robot is paused for over 10 minutes, it will go to sleep, and the power indicator light will flash every few seconds. Press any button to wake the robot up.

Notes:

- The robot will not go to sleep when it is charging.
- The robot will automatically shut down if left sleep for more than 12 hours.

Charging

After cleaning, the robot will automatically return to the dock for charging. During cleaning, the robot will return to the dock to charge when the battery level is low. Press  to send the paused robot back to the dock. The power indicator light will breathe during robot charging.

Note: If the robot fails to find the dock, it will automatically return to its starting position. In this case, place the robot to the dock manually to charge.

Error

If an error occurs, the power indicator light will flash red. A pop-up notification will appear in the app and a voice alert may sound.



Notes:

- The robot will go to sleep automatically if left in a malfunctioning state for over 10 minutes.
- Placing a malfunctioning robot on the dock manually will end the current cleanup.

DND Mode

The default Do Not Disturb (DND) period is from 22:00 to 08:00. You can use the app to modify the DND period or disable the mode. In DND mode, the robot will not play voice messages.

Restoring Factory Settings

If the robot does not respond when a button is pressed or cannot be turned off, power it on and press and hold  for five seconds. After hearing a voice message, press and hold  for five seconds. The robot will then restart and be restored to factory settings.

Note: After this process, existing settings such as scheduled cleaning and WiFi will be restored to factory settings.

Routine Maintenance

C1 Main Brush

* Clean every 2 weeks and replace every 6-12 months.

C1-1— Turn over the robot and press the main brush cover latches to remove the main brush cover.

C1-2— Remove the main brush and clean it.

C1-3— Reinstall the main brush and main brush cover, and press the cover securely.

Notes:

- It is recommended to wipe the main brush with a wet cloth. If the main brush is soaked, air-dry it away from direct sunlight.
- Do not use corrosive cleaning fluid or disinfectant to clean the main brush.

C2 Side Brush

* Clean monthly and replace every 3-6 months.

Unscrew the side brush screw. Remove and clean the side brush. Then, reinstall the brush and tighten the screw.

C3 Robot Sensors

* Clean as required.

Use a soft, dry cloth to wipe and clean all sensors, including:

C3-1— Dock Locator

C3-2— Cliff Sensors

Note: Do not use chemicals such as cleaning fluids and sprays to clean these sensors.

C4 Omnidirectional Wheel

* Clean as required.

C4-1— Use a tool, such as a small screwdriver, to pry out the axle and take out the wheel.

C4-2— Rinse the wheel and the axle with water to remove any hair and dirt. Air-dry, reinstall, and press the wheel and axle back in place.

Note: The omnidirectional wheel bracket cannot be removed.

C5 Main Wheels

* Clean as required.

Clean the main wheels with a soft, dry cloth.

C6 Dustbin and Water Tank Combo Unit

* Clean as required.

C6-1— Press the release button to take out the unit.

C6-2— Open the lid of the unit, empty the dustbin and clean it.

C6-3— Open the water tank stopper and empty the tank.

C6-4— Reinstall the unit in the robot.

Note: After mopping, empty the water tank, wash the mop cloth, and air-dry them to prevent odors.

C7 Mop Cloth

* Clean after each use and replace every 3-6 months.

C7-1— Remove the mop cloth mount in the direction shown in the picture.

C7-2— Remove the mop cloth from the mount.

C7-3— Wash the mop cloth and then air-dry it.

C8 Washable Filter

* Clean every 2 weeks and replace every 6-12 months.

C8-1— Open the lid of the dustbin and water tank combo unit as shown, press the filter holder latches to pull out the filter holder.

C8-2— Remove the filter from the filter holder, rinse the filter repeatedly and tap it to remove as much dirt as possible.

C8-3— Allow at least 24 hours for the filter to dry thoroughly before reinstalling it.

Note: Do not touch the surface of the filter with hands, brushes, or sharp objects to avoid potential damage.

C9 Auto-Empty Dock

* To ensure optimal emptying performance, replace the dust bag when it is full.

C9-1— Open the dock cover, lift the dust bag out of the dock and discard it.

C9-2— Clean the filter with a dry cloth.

C9-3— Install a new dust bag in place and close the dock cover.

C9-4— Wipe the dock location beacon and charging contacts with a soft, dry cloth to keep them clean.

C10 Charging Contacts

* Clean as required.

Use a soft, dry cloth to wipe the charging contacts on the robot and the dock.

Basic Parameters

Robot

| | |
|-------------|--|
| Model | RRA0TAC |
| Battery | 14.4V/3200mAh (TYP) lithium-ion battery |
| Rated Input | 20VDC 0.8A |

Auto-Empty Dock

| | |
|----------------------------------|------------|
| Model | AED08HRR |
| Rated Input Voltage | 220-240VAC |
| Rated Frequency | 50/60 Hz |
| Rated Input (Dust Collection) | 2A |
| Rated Input (Charge) | 0.2A |
| Rated Output | 20VDC 0.8A |

EU Declaration of Conformity

Hereby, Beijing Roborock Technology Co., Ltd. declares that the radio equipment type RRA0TAC is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://global.roborock.com/pages/compliance>

Please visit the following link to view the network interfaces exposed by the product, services exposed through the network interfaces, and external sensors information.
<https://global.roborock.com/pages/compliance>

Common Issues

| Issue | Solution |
|---|---|
| Unable to power on | <ul style="list-style-type: none">• Battery low. Put the robot on the dock and charge it before use.• Battery temperature too low or too high. Only use the robot within the range of 4-40°C (39-104°F). |
| Unable to charge | <ul style="list-style-type: none">• Dock not connected to power. Check whether both ends of the power cord are properly connected.• Poor contact. Clean the charging contacts of the dock and the robot.• Battery temperature too low or too high. Only use the robot within the range of 4-40°C (39-104°F). |
| Unable to return to dock | <ul style="list-style-type: none">• Too many obstacles near the dock. Clear them up or move the dock to an open area.• Robot too far from the dock. Place it closer and retry. |
| Abnormal behavior | <ul style="list-style-type: none">• Restart the robot. |
| Unable to connect to WiFi | <ul style="list-style-type: none">• WiFi disabled. Reset the WiFi and try again.• Poor WiFi signal. Move the robot to an area with better WiFi.• Abnormal WiFi connection. Reset the WiFi, download the latest app version and retry.• Unable to connect to WiFi abruptly. There may be an error with your router settings. Contact Roborock customer service for help with troubleshooting. |
| Robot becomes offline | <ul style="list-style-type: none">• Check that your robot is connected to Roborock app and is always within WiFi coverage. |
| Noise during cleaning | <ul style="list-style-type: none">• The main brush, side brush, or main wheels may be jammed. Turn off the robot and clean them.• The omnidirectional wheel may be jammed. Use a screwdriver to remove it for cleaning. |
| Poor cleaning performance and/or dust leakage | <ul style="list-style-type: none">• The dustbin is full and needs emptying.• The filter is blocked and needs cleaning.• The main brush is tangled up. Clean it. |
| Scheduled cleaning is not working | <ul style="list-style-type: none">• Keep the robot charged. Scheduled cleaning can only begin when the battery level is above 20%. |
| The robot does not resume cleaning after recharging | <ul style="list-style-type: none">• Make sure that the robot is not in DND mode. DND mode will prevent auto top-up.• If the robot is placed manually on the dock or sent to dock by pressing buttons, it will not be able to resume cleaning. |

Common Issues

| Issue | Solution |
|---|---|
| Slow charging | <ul style="list-style-type: none">• When used at high or low temperatures, the robot will automatically reduce its charging speed to extend battery life.• Charging contacts dirty. Wipe them with a soft, dry cloth. |
| Is power always being drawn when the robot is on the dock? | <ul style="list-style-type: none">• The robot will draw power while it is docked to maintain battery performance, but the power consumption is extremely low. |
| Does the robot need to be charged for at least 16 hours for the first three uses? | <ul style="list-style-type: none">• No. Lithium-ion batteries have no memory effect. The robot can be used once fully charged. |
| Unable to auto-empty | <ul style="list-style-type: none">• Auto-emptying is disabled. Check in-app settings.• Dust bag is not installed. Check and install.• Auto-emptying will not be triggered if the robot returns to the dock without cleaning.• The robot will not auto-empty after returning to the dock in DND mode. Adjust the cleaning time or DND period. |
| Reduced emptying performance or unusual noise when emptying | <ul style="list-style-type: none">• The main brush or main brush cover is not properly installed. Check and install in place.• The filter, air duct, disposable dust bag, suction inlet, air inlet, or dustbin is blocked. Clean to remove blockages. |
| The status indicator light is steady red | <ul style="list-style-type: none">• The dust bag is not in place. Check and install in place. |
| The robot begins to miss certain spots | <ul style="list-style-type: none">• The cliff sensors may be dirty. Clean them with a soft, dry cloth. |
| No or little water during mopping | <ul style="list-style-type: none">• Use the mobile app to increase the water flow.• Check whether there is water in the water tank and check the manual for instructions on how to correctly install the dustbin and water tank combo unit, mop cloth mount and mop cloth. |
| The robot cannot return to the charging dock when it has been moved manually | <ul style="list-style-type: none">• After a significant position change, the robot will re-generate the map. If the charging dock is too far away, it may not be able to return to recharge and must be placed on the charging dock manually. |