

Roborock F25 Ultra

Wet and Dry Vacuum Cleaner User Manual

Read this user manual with diagrams carefully before using this product and store it properly for future reference.



English	002
Français	011
Deutsch	020
Italiano	029
Español	038
Nederlands	047
Polski	056
Norsk	065
Svenska	073
Português	082
Suomi	091
Română	099
Dansk	108

English

Contents

003	Safety Information
003	International Symbols Explanation
004	Product Introduction
004	Product Installation
005	Connecting to the App
005	Instructions for Use
007	Routine Maintenance
008	Basic Parameters
009	Common Issues
010	EU Declaration of Conformity
010	WEEE Information
010	Warranty Information

Safety Information

Usage Restrictions

- Do not use this product outdoors or in any commercial or industrial environments. It is intended for home use only.
- Do not store the product anywhere in a car to avoid high or low temperatures affecting its battery life.
- The battery pack of this cleaner cannot be used for charging or discharging in environments with high humidity, or temperatures above 40°C (104°F) or below 4°C (39°F).
- Use the maintenance brush carefully to avoid injury. Keep out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety (CB).
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision (EU).
- To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.
- The antenna used for this transmitter must not be co-located in conjunction with any other

antenna or transmitter.

- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Keep limbs and pets away from the rotating brush heads to avoid injury.
- Do not touch the power cord, nor operate the product with wet hands to prevent injuries.
- Do not vacuum any burning or smoking substances (such as non-extinguished cigarette butts).
- Do not vacuum any hard or pointy objects (such as building materials, glass, and nails).
- This product is only to be used in areas below 3,000 meters above sea level.
- ⚠ During and after steam or hot-water self-cleaning and drying, the temperature of accessible surfaces of the charging dock, roller, cleaner head and vacuum cleaner will be high.
- ⚠ To prevent burns and scalds by steam, do not touch their surfaces or remove the clean tank.
- Do not direct the cleaner head, especially the steam outlets, towards equipment containing electrical components such as the interior of ovens.
- Do not vacuum cords or other cables to avoid danger.
- Only use the product in accordance with the User Manual. Any loss or damage caused by improper use will be borne by the user.
- Roborock and its retailers disclaim all liability for indirect, punitive, incidental, or consequential damages resulting from the use, misuse, or inability to use this product. This disclaimer does not affect any statutory rights that may not be disclaimed under applicable law.

Battery and Charging

WARNING

- Do not charge non-rechargeable batteries.
- This product contains batteries that are only replaceable by skilled persons.

- For the purposes of recharging the battery, only use the detachable docking station roborock MDS27HRR provided with this product.
- Do not use any third-party batteries, power cords or docks.
- To reduce the risk of injury from moving parts, keep the power off before servicing.
- Do not disassemble, repair or modify the battery, power cord or the dock.
- Do not charge the vacuum or install the dock near heat sources or in humid areas (such as radiators or bathrooms).
- Do not wipe the power cord or the dock with a wet cloth, nor touch them with wet hands.
- If the power cord is damaged or broken, immediately stop using and contact the after-sales service.
- If the product is not going to be used for an extended period of time, fully charge it, unplug its power supply, and place it in a cool and dry place.
- Make sure that you recharge it once every three months to avoid battery overdischarge.
- Do not discard waste batteries. Leave them with a professional recycling organization.

Transportation

- It is recommended to transport the product in its original packaging.

Note

- Rinse the filter at least once a month with tap water. For details, please refer to the Routine Maintenance section.

International Symbols Explanation

🏠 – For indoor use only.

A Product Introduction

A1 Vacuum Cleaner

Switch Mode


- Press: Switch to AUTO/Steam/Hot-water/Sponge mode
- Press and hold for 2 seconds while charging: Switch to Quiet Drying / Fast Drying mode

Power

- Press: Start operating / Enter wait-for-orders mode
- Press and hold for 2 seconds when the vacuum cleaner is waiting for orders: Power off

Self-Clean

- Press while charging: Start/Pause self-cleaning
- Press and hold for 2 seconds while charging: Start/Stop drying

Note: To stop self-cleaning or drying, press the  button while charging.

A1-1—Speaker

A1-2—Handle

A1-3—Handle Release Hole

A1-4—Roller Release Tab

A1-5—Adaptive Drive Wheels

A1-6—LED Screen

A1-7—Dirty Tank Release Button

A1-8—Dirty Tank Handle

A1-9—Dirty Tank

A1-10—Clean Tank Refill Port

A1-11—Clean Tank

A1-12—Steam Outlets

A1-13—Clean Tank Release Button

A1-14—Cleaning Solution Refill Port

A1-15—Headlight

A1-16—Roller

A2 Charging Dock

A2-1—Drying Tray

A2-2—Drying Air Outlets

A2-3—Charging Contacts

A3 Power Cord

A4 Filter

A5 Maintenance Brush

Note: The maintenance brush can be placed in the groove at the back of the charging dock.

A6 LED Screen

A6-1—Light Stripe

A6-2—WiFi Indicator

- Off: WiFi disabled
- Flashing slowly: Waiting for connection
- Flashing quickly: Connecting
- Steady on: WiFi connected

A6-3—Battery Level

A6-4—Sponge Mode

A6-5—AUTO Mode

A6-6—Charging Indicator

A6-7—Error Indicator

A6-8—Hot-water Mode

A6-9—Steam Mode

B Product Installation

B1 Fit the Handle

B1-1—Connect the handle to the main body until it clicks into place. The buttons on the handle should face forward.

B1-2—To detach the handle, insert a pen-shaped object into the handle release hole on the back of the main body and press. Hold the handle and pull it out.

B2 Plug in the Charging Dock

B2-1—Place the charging dock upside down and plug the power cord into the dock.

Note: The power cord can exit from either the right or left cord storage slot opening.

B2-2—Place the charging dock on a flat, hard floor and plug it in.

Notes:

- Do not place the charging dock in humid locations or near heat sources, such as bathrooms, kitchens, and radiators.
- The maintenance brush can be placed in the groove at the back of the charging dock.



Connecting to the App

1. Download the App

Search for "Roborock" in the App Store or Google Play or scan the QR code to download and install the app.



2. Reset WiFi

Keep the machine charging or in wait-for-orders mode with the screen on. Press and hold the  and  buttons simultaneously until you hear the "Resetting WiFi" voice message. The reset is completed when the WiFi indicator flashes slowly. The vacuum cleaner will then wait for a connection.

Note: If you cannot connect to the vacuum cleaner due to your router configuration, a forgotten password, or any other reason, reset the WiFi and add your vacuum cleaner as a new device.

3. Add Device

Open the Roborock app, tap "Add Device" or the "+" button on the homepage, and add your device following the in-app guide.

Notes:

- The actual process may vary due to ongoing app updates. Follow the instructions provided in the app.
- Only 2.4 GHz WiFi is supported.

Instructions for Use

C1 Filling the Clean Tank

C1-1—Grip the clean tank handle, press the release button, and pull the clean tank upwards at a slight angle to remove it.

C1-2—Open the cap of the clean tank refill port, add tap water, and then close the cap tightly.

C1-3—Open the cap of the cleaning solution refill port, add a moderate amount of cleaning solution, and then close the cap tightly.

C1-4—Place the clean tank back to the cleaner head. Push it down gently until it clicks into place.

Notes:

- To avoid deforming the clean tank, do not use hot water.
- To prevent corrosion or damage, do not use any disinfectant. Only use cleaning solutions recommended by Roborock.
- To improve cleaning performance, we recommend adding the cleaning solution to the cleaning solution refill port before use. During cleaning, the machine will automatically mix the solution with clean water based on the preset ratio. Skip this step if floor cleaning solutions are not needed during daily cleaning.


C2 Locking and Unlocking

Gently step on the cleaner head and hold the handle. Push it to lock the vacuum cleaner, and pull it to unlock.

C2-1—Locked

C2-2—Unlocked

C3 Starting the Vacuum Cleaner


Press the  button, and the machine will enter wait-for-orders mode. Gently step on the cleaner head and hold the handle. Then, tilt the handle backwards to unlock the machine. It will begin operating automatically.

C4 Lay-Flat Cleaning

The vacuum cleaner can be laid flat to clean under furniture and appliances. To do this, lower the handle while using the machine. The available capacity of the dirty tank decreases during low-profile cleaning. Therefore, we recommend you empty the dirty tank before cleaning under furniture and appliances.

Note: Always keep the vacuum cleaner flat with the buttons on the handle facing up.


C5 Mode Switching

Press the  button to switch between AUTO, Steam, Hot-water, and Sponge modes. The screen will display the icon of the current mode.

Note: It is normal if a small amount of steam keeps coming out after using Steam mode.

Wait for Orders and Power off

1. When you stand the machine upright during cleaning, it will stop operating and enter wait-for-orders mode.

2. If the vacuum cleaner remains idle for 5 minutes when it is waiting for orders, it will automatically power off. To manually turn it off, press and hold the  button for 2 seconds when it is waiting for orders.

C6 Water Level Alerts

When the dirty tank is full or the clean tank is empty during use, the vacuum cleaner will provide audio and visual alerts. In this case, fill the clean tank or empty the dirty tank before resuming cleaning.

C6-1—Error indicator flashing: Error occurred

C7 Emptying the Dirty Tank

C7-1—Hold the dirty tank handle, press the release button, and tilt the tank backwards to remove it.

 
C7-2—Gently pull the handle of the tank lid upwards to remove the lid, and then empty the dirty tank.

C7-3—Reinstall the tank lid. Tilt the dirty tank, insert its bottom back into the vacuum cleaner, and then push it gently inwards until it clicks into place.


C8 Charging and Self-Cleaning

1. Lock the vacuum cleaner when it is waiting for orders and place it onto the charging dock. Charging starts when



you hear the voice message: "Charging started. Please start self-cleaning."

2. Press the  button to start/pause smart self-cleaning.
3. After self-cleaning and drying are completed, follow the voice message and empty the dirty tank promptly to prevent odors.

Notes:

- Make sure that the clean tank and dirty tank are in place for optimum self-cleaning and drying performance.
- The product is equipped with a built-in high-performance lithium-ion rechargeable battery pack. To maintain battery performance, keep the product charging during normal use.
- Always place the vacuum cleaner back onto the charging dock after use to prevent water stains on the floor.
- If the Charge & Sleep mode is disabled and the machine is shut down, ensure the machine is on the charging dock, press the  button to turn it on, and then start self-cleaning.


Drying

When self-cleaning is completed, drying will start automatically. During charging, press and hold the  button for 2 seconds to switch between drying modes. To start drying directly, press and hold the  button for 2 seconds while the machine is charging.


Notes:

- You can disable automatic drying in the app.
- You can adjust or schedule self-cleaning and drying in the app.
- Self-cleaning and drying are available only when the vacuum cleaner is charging and has a sufficient battery level. The required battery level varies by




self-cleaning and drying mode. If the vacuum cleaner is set to steam self-cleaning or fast drying but the battery level is low, it will automatically switch to hot-water self-cleaning or quiet drying, respectively.

- Stay away from the charging dock area during self-cleaning and drying.
- If the Charge & Sleep mode is disabled and the machine is shut down, ensure the machine is on the charging dock, press the  button to turn it on, and then start drying.

Enable/Disable Charge & Sleep Mode

The Charge & Sleep mode is disabled by default. To enable or disable it, press the  button for 5 seconds while charging until you hear the voice message: "Charge & Sleep mode enabled" or "Charge & Sleep mode disabled."



Notes:

- WiFi not connected, with Charge & Sleep mode disabled: Five minutes after the machine is fully charged, it will automatically shut down. To start self-cleaning and drying, press the  button to turn it on, and then press the  button.
- In other cases: After the machine has been charging for 5 minutes without operation, the LED screen will turn off. After the machine is fully charged, it will not automatically shut down. To start self-cleaning and drying, press the  button.



Voice Message Settings

After adding your vacuum cleaner in the app, you can adjust the volume and change the language of voice messages in the app.

Restoring Factory Settings

When the vacuum cleaner is waiting for orders, press and hold the  button and then the  button for 5 seconds until you hear the "Restoring factory settings" voice message. The machine will then be restored to factory settings.

Deactivating WiFi

To disconnect the vacuum cleaner from WiFi, press the  and  buttons until you hear a voice message. Then wait for 5 minutes and the WiFi will be automatically deactivated. If you want to reconnect, please follow the related connecting instructions.

D Routine Maintenance

Notes:

- Before cleaning or maintaining the product, make sure the vacuum cleaner is powered off or stopped and the charging dock is unplugged.
- The frequency of replacement may vary with actual usage. If you notice any abnormal wear, replace the parts immediately.
- The filter and roller fibers have been treated with silver ion antimicrobial agent to resist bacterial odors.

Product Maintenance

If the machine is left unused for a prolonged period of time, fully charge it, unplug it, and store it in a cool, dry place. Do not place it in humid locations or direct sunlight. Charge it at least once every 3 months to avoid overdischarge.

Vacuum Cleaner

Wipe and clean the vacuum cleaner with a soft, dry cloth. Before cleaning, remove the vacuum cleaner from the charging dock and power it off.

D1 Dirty Tank and Filter

* Dirty tank: Clean as needed.

* Filter: Clean or replace as needed.

D1-1—Remove the dirty tank, pull the handle of the tank lid upwards to remove the lid, and remove the filter from the tank lid. Use the provided maintenance brush to clean the debris on the filter. If the filter is dirty, rinse it with cold water and shake off the remaining water.

D1-2—Dry all the parts thoroughly before installing them back in place.

Notes:

- Leave the filter to dry completely for at least 24 hours before reinstalling it.
- Do not touch the filter surface with hands, brushes, or sharp objects to avoid damaging it.

D2 Solid-Liquid Separator

* Clean as needed.

1. To remove the solid-liquid separator, grip the snap-fit fasteners on both sides and detach them.
2. To install the separator, ensure that it faces the dirt inlet, align the snap-fit fasteners properly, and press the fasteners until

they snap into place.

D3 Clean Tank and Roller

* Clean tank: Clean every 2–4 weeks.

* Roller: Clean as needed and replace every 3 months.

D3-1—Grip the clean tank handle, press the release button, and pull the clean tank upwards at a slight angle to remove it.

D3-2—Rinse the tank bottom with clean water.

Note: To prevent blockage, check the steam outlets for dirt and rinse them as needed after extended use.

D3-3—Grab the roller release tab and pull the roller out along the cleaner head. Use the provided maintenance brush to remove dirt from the roller, and then rinse it with clean water.

D3-4—To replace the roller, grab the roller cap and pull it out of the roller. Then, install the roller cap to a new roller.

D3-5—Reinstall the roller and clean tank in sequence.

Notes:

- **D3-6**—After using Steam mode, do not touch the positions shown in the diagram.
- **D3-7**—After using Hot-water mode, do not touch the water outlets shown in the diagram.
- Use the maintenance brush carefully to avoid injury.
- When you detach the roller cap, do not pull it by its handle.
- To prevent potential damage, keep the roller cap attached while cleaning the roller.

D4 Adaptive Drive Wheels

Clean the adaptive drive wheels regularly.

D5 Cleaner Head and Dirty Water Pathway

* Clean as needed.

1. Power off the vacuum cleaner, place it in a stable position, and then remove the dirty tank, clean tank, and roller.
2. Clean the roller slot and dirty water pathway with the provided maintenance brush.
3. Reinstall the roller, clean tank, and dirty tank.

Note: Do not rinse the cleaner head directly with water.

D6 Charging Dock

* Clean as needed.

Unplug the charging dock and use a soft, dry cloth to clean its surface and charging contacts.

Notes:

- Do not rinse the charging dock directly with water.
- When there is water on the surface of the charging dock, wipe it with a soft, dry cloth and do not overturn it to prevent damage.

Basic Parameters

Vacuum Cleaner

Model	WD6Y3A
Rated Voltage/ Current	21.6 VDC 20 A
Battery	21.6 V/4600 mAh (TYP) Lithium-ion battery


Dock Charger

Model	MDS27HRR
Rated Input Voltage	220-240 VAC
Rated Frequency	50-60 Hz
Rated Input (Charging)	0.65 A
Rated Input (Drying)	3 A
Rated Output	29 VDC 2.07 A
Charging Battery	21.6 V/4600 mAh (TYP) Lithium-ion battery

WiFi Specification

Service	WiFi
Protocol	802.11b/g/n
Frequency Range	2400-2483.5 MHz
Max. Output Power	≤20dBm

Common Issues

Issue	Solution
There are large water stains on the floor, the cleaner head leaks water, or water cannot be vacuumed from the floor.	<ul style="list-style-type: none">Remove the roller and dirty tank, check the dirty tank pathway and the suction port inside the roller slot for any clogging, and check whether the filter is clogged or wet. Confirm that the dirty tank and filter are properly installed, and then try again.
The LED screen does not light up and the vacuum cleaner cannot start.	<ul style="list-style-type: none">Low battery level. Charge it before use.
Unpleasant smell during use.	<ul style="list-style-type: none">Clean the roller, dirty tank, and filter.
Cleaning creates a lot of foam.	<ul style="list-style-type: none">Do not add any disinfectant to the clean tank or spray it on the floor. Only use cleaning solutions recommended by Roborock, as others may cause damage to the product.Do not add the cleaning solution more than the recommended amount.
The vacuum cleaner is not charging properly, or the drying or self-cleaning process is interrupted.	<ul style="list-style-type: none">Clean the charging contacts on the charging dock and the vacuum cleaner.
The LED screen is on, but the vacuum cleaner does not respond to button pressing.	<ul style="list-style-type: none">Press and hold the  button for 10 seconds to force a power-off, and then restart the machine.
Unable to connect to WiFi.	<ul style="list-style-type: none">WiFi is disabled. Reset the WiFi and try again.Poor WiFi signal. Make sure that the vacuum cleaner is placed in an area with good WiFi signal.Abnormal WiFi connection. Reset the WiFi, download the latest app version, and try again.Unable to connect to WiFi abruptly. There may be an error with your router settings. Contact Roborock customer service for help with troubleshooting.
Is power always being drawn when the vacuum cleaner is on the charging dock?	<ul style="list-style-type: none">The vacuum cleaner will consume power while it is docked to maintain battery performance, but the power consumption is extremely low.
No steam comes out in Steam mode.	<ul style="list-style-type: none">Check whether there is water in the clean tank and whether the tank is properly installed.

EU Declaration of Conformity

We Shenzhen Roborock Innovation Technology Co., Ltd. hereby declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:

<https://global.roborock.com/pages/compliance>

We Shenzhen Roborock Innovation Technology Co., Ltd. hereby declare that the radio equipment type WD6Y3A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://global.roborock.com/pages/compliance>

Please visit the following link to view the network interfaces exposed by the product, services exposed through the network interfaces, and external sensors information:

<https://global.roborock.com/pages/compliance>

WEEE Information

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Warranty Information

The warranty period depends on the laws of the country in which the product is sold, and the warranty is the responsibility of the seller.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear.
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories, use of force.
- Damage caused by external influences.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.
- Partially or completely dismantled appliances.